 
 
 
 
 
 


液压站选型表

机型	型号	(注) 额定使用 压力 MPa	最大排量 L/min (在50Hz条件下使用时)										记述页码
			1	2	5	10	20	50	100				
QV-PAC	QV3A	3.5											Q1-1
	QV4A	4~6											
TU-PAC	TU1C	3.5											Q2-1
	TU2C	7											
	TU3C	3.5											
	TU4C	6											
	TU5C	4											
	TU6C	9											
	TU7C	7											
	TU8C	5											
	TU9C	7											
	TU10C	5											
	TU11C	9											
	TU13C	7											
Q-PAC	Q08074	3.5											Q4-1
	Q0814	7											
	Q1614	3.5											
	Q1624	6											
	Q2124	4											
	Q1634	9											
	Q2134	7											
	Q3134	5											
	Q3154	7											
	Q4054	5											
	Q3174	9											
	Q4074	7											

注) 表示在 50Hz、最大排量时电机额定功率内的使用压力。
系统最高使用压力因使用流量及有无冷却装置的不同而有差异。详细信息请与本公司联系。

使用时的注意事项

- 使用时请将油温保持在 +5 ~ +60℃ 的范围内。
- 启动时, 请从泵体注油口加满液压油。(QV - PAC 除外)
- 电机的布线请按照下列方式进行。

电源侧 { R - U
S - V
T - W } 电机侧

●液压泵的调整方法

压力	向右旋转压力调整螺钉提高压力。
排量	向右旋转排量调整螺钉减小排量。

- QV - PAC、TU - PAC 及 Q - PAC 的加油方法为: 在完全排出传动器及配管内部的空气后, 加油至液位表的中心线。