

Directional and flow control valves "COMNICA"

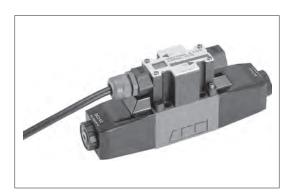

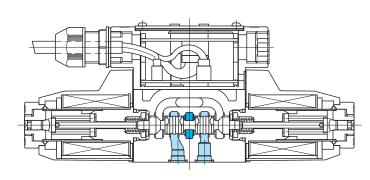

- COMINCA valves offer independent setting for acceleration and deceleration which is indispensable for shockless operation. High speed positioning which is difficult with conventional shockless valves and adjustable speed setting is possible.
- Onboard microprocessor allows setting of required parameters without valve to valve variation. Push button operation while monitoring the integrated digital indicator enables simple, repeatable setting and adjustment. Handheld setting device also available for same setting operation as valve mounted type.
- Compact, space-saving design with same configuration and robust construction as standard solenoid valves. Ease-ofuse design facilitates operation as well as installation and maintenance with features such as manual override pins (for operation confirmation of deenergized valve), and reduced wiring.
- Can be connected to general purpose relays, PLCs, etc., like standard solenoid valves.

Model Code

COM-3/5 Series

(F11)-COM-3-2C-30-CH-(C)-(H)-11-(S4)

1 2 3 4 5 6 7 8 9 12 13

COM-52/7/8 Series

(F11)-COM-7-2C-130-CH-(C)-(H)-(E)-(T)-10-(S4)

1 2 3 4 5 6 7 8 9 10 11 12 13

1 Hvdraulic fluid

Omit: mineral oil

F11: Water-glycol based fluid

- 2 COMNICA valve
- 3 Mounting dimensions
 - 3: ISO 4401-03
 - 5: ISO 4401-05
 - 52: ISO 4401-05
 - 7: ISO 4401-07
 - 8: ISO 4401-08
- 4 Spool type
 - Refer to "Spool type".
- 5 Spool/spring arrangement
 - C: Spring centered (3 position)
- 6 Max. control flow
 - Refer to "Specifications".
- 7 Control or wiring
 - SH: Shockless
 - CH: 3 Channel setting
 - AN: Analog input
 - U: DIN 43650 connector, Pg.11 (COM-3/52/7/8)
 - KU: Lead wire system (lead wire length: 350 mm)

Note: No control function is provided for U or KU type. Use the PD3 controller (see page E17-1) or the COM-AMP (see page E16-15).

- 8 Connection system (control systems SH, CH and AN)
 - Omit: 1-meter harness
 - C: 1-meter harness with connector
 - RC: Receptacle connector
- 9 Solenoid supply voltage (wiring systems U and KU)
 - Omit: control function provided (omitted for systems SH, CH and AN)
 - G: DC 12 V
 - H: DC 24 V
- 10 Pilot (COM-3/52/7/8)
 - Omit: internal pilot
 - E: External pilot
- 11 Drain (COM-3/52/7/8)
 - Omit: external drain
 - T: Internal drain
- 12 Design no.
 - 10: COM-5, COM-52, COM-7 and COM-8
 - 11: COM-3
- 13 Special feature (consult Tokyo Keiki for details.)
 - S4: Meter-out spool with spool opening ratio of 3:2 for
 - P side : T side

Specifications

Model Code		COM-3	COM-5	COM-52	COM-7	COM-8	
				COIVI-52		CUIVI-0	
Rated Pressure	MPa	24.5	20.6	24.5			
Allowable Tank Port Back Pressure	MPa	13.7		In	Internal drain: 13.7		
7 mowabio fame fore baok i recours	WII U	1,	10.7		xternal drain: 2	4.5	
Max. control flow	L/min	30*1	70*1	80*2	130*2	250*2	
Min. control flow	L/min	0.5*1	1.5*1	2*2	3*2	5*2	
Pilot pressure	MPa	_	_	N	Nore than 2 MF	Pa	
Hysteresis			Omitted: less t	than 7%, F11:	less than 14%		
Repeatability		Less than 1% of max. flow					
Flow setting		Solenoid a, b 100 divisions each					
Min. working time	ms	5 50*3 100*3 70*3					
Acceleration-deceleration time setting		0 to 9.9s (0.1s unit)/					
Acceleration-deceleration time sett	iiig	0 to 9.99s (0.01s unit) switchable					
Ambient temperature	°C			0~60			
Fluid temperature	°C			7~60			
Fluid viscosity	mm²/s			20~300			
Vibration resistance			45	m/s ² (JIS D16	01)		
Shock resistance			300	m/s ² (JIS C 0	041)		
Waterproof dustrant		IP54 (control SH, CH, AN)					
Waterproof, dustproof		IP65 (wiring U, KU)					
Supply voltage *4				DC 21.6~28 \	I		
Max. power consumption *4			40 V	V (DC 24 V, 1.6	i7 A)		
Input-output signals *4			9	See table belov	٧		
Weight	kg	2.5	6.5	9	12	20	

Note:

- *1 When supply pressure is 6.9 MPa
- *2 When valve differential pressure is 1 MPa
- *3 During 0←→100% operation
- *4 When a control function is provided

Control Function

SH Type (Shockless)

Simple shockless and speed control by selecting A or B direction with contact signal of PLC, etc. In addition easy position control can be achieved by using the HALT function.

CH Type (3 Channel Setting)

Enables selection of three flows - high, medium, low speeds - for A, B direction and independent setting of acceleration, deceleration between the three flows.

AN Type (Analog Input)

Speed (flow) setting in real time with analog voltage. Acceleration, deceleration time setting possible.

Input-Output Signals


Control Function	Connection System	Contact Inputs	Analog Inputs	Contact Outputs
CH tupo	Omitted C type	3 contacts, internal common and sink wiring supported		
SH type	RC type	3 contacts, external common (bidirectional photo-coupler insulation), sink wiring/source wiring supported	_	_
CH type	_	7 contacts, external common (bidirectional photo-coupler insulation), sink wiring/source wiring supported	_	1 contact, external common (bidirectional photo-coupler insulation)
AN type	Omitted C type	1 contact, internal common and sink wiring supported	1 contact, DC 0V to ±10V (command 0V and power 0V	_
	RC type	1 contact, external common (bidirectional photo-coupler insulation)	voltages connected internally)	

- Contact point input ON: input common ⇔ voltage between contact point input, DC 15 V to 35 V
- \bullet Contact point input OFF: input common \Leftrightarrow voltage between contact point input, DC 0 V to 3 V
- Contact point output: max. load current 50 mA
- * All contact signal except for AN type DC±10 V signal.
- * The analog input voltage of the AN type is the voltage referenced to the command 0V. Furthermore, the command 0V voltage is connected internally to the power 0 V voltage.


Spool Types

Spool Center Position		De ditiene	Function	al Symbol
	Spool Cent	er Position	COM-3/5	COM-52/7/8
2	T T	Closed center	AB W AB T T T T T T T T T T T T T T T T T T T	AB D X PT IV a
33		A-B-T connected w/restrictors	AB W	AB b X PT Ya

Input Voltage - Flow Characteristics

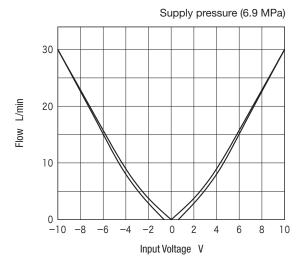


Supply Pressure - Flow Characteristics

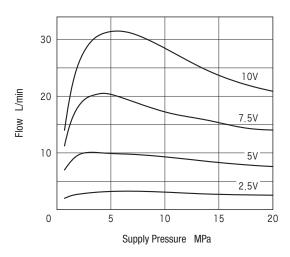


COM-5 (characteristics applicable in the case of the COM-5-2C-70-AN-10)

Input Voltage - Flow Characteristics

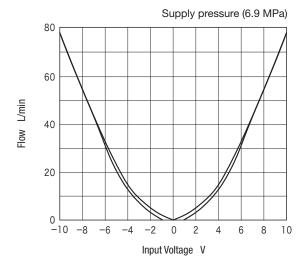


Supply Pressure - Flow Characteristics

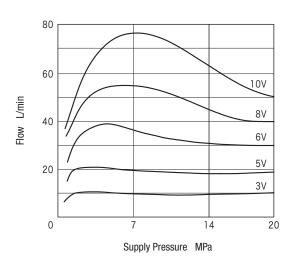


COM-52 (characteristics applicable in the case of the COM-52-2C-80-AN-10)

Input Voltage - Flow Characteristics

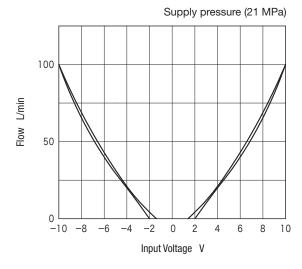


Supply Pressure - Flow Characteristics

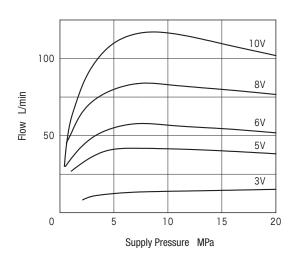


COM-7 (characteristics applicable in the case of the COM-7-2C-130-AN-10)

Input Voltage - Flow Characteristics


Supply Pressure - Flow Characteristics

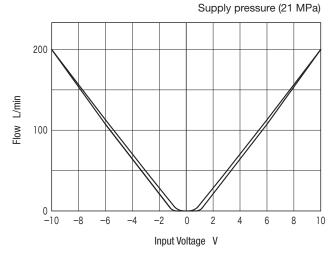

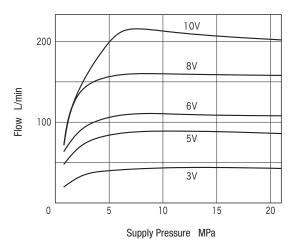


COM-8 (characteristics applicable in the case of the COM-3-2C-250-AN-10)

Input Voltage - Flow Characteristics

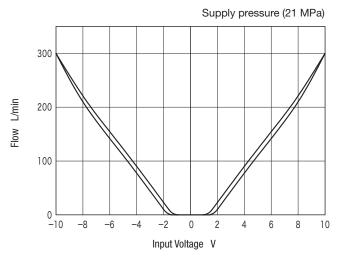

Supply Pressure - Flow Characteristics

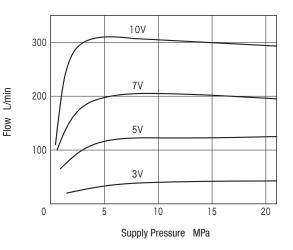

Notes on Operation

1. Mounting orientation

Mount valves so spool axis is horizontal.

2. T port

Prevent pressure surges above 13.7 MPa (24.5 MPa for external drain) from being generated in T port. Ensure that valve is always filled with oil.

3. Signal line

Ends of signal wires not used should be insulated and short circuits should be prevented.

4. Wiring specifications

When using extended lead wires for COMNICA valves, insure that cables are heat and oil resistant and of proper size as described below.

- Power supply (24V or 0V) AWG18 or above 0.75 mm²
- · Contact point signal or analog input AWG22 or above 0.3 mm²

5. Contact point input-output current

When contact signal is input, the following currents flow to the contact points of the PLC, relay, etc. Care should be paid to the current limitations of external devices.

Setting point current (A) ≈ (contact point input voltage -1)/15000

Operation output (CH type only) max. load current is 50 mA and care should be paid to the load on the PLC, relay, etc. Especially when connecting directly to LED, etc., serially connect resistance to operational output + or operational output -, and limit current.

Minimum applicable load (Ω) \approx (load voltage -1.2)/0.05

6. Manual operation

For manual switching, push the manual override pin. Be aware that actuation force increases with higher back pressure.

7. Waterproof, dustproof

Water and dust protection class is IP54. Separate protection should be implemented for jets from nozzles, etc. In order to maintain water and dust resistance, nameplate and packing should be tightened with the tap pins after adjustment of settings.


Tightening torque: 0.34 to 0.53 N⋅m

8. Chattering may arise when these valves are used in combination with the pilot check valves. In cases like this, use the external drain type of pilot check valves.


9. EMI (electro-magnetic interference)

Valve control flow may vary with changes in the magnetic field. As shown in the examples below, when flow is controlled by solenoid "a" and a nearby solenoid valve is energized, controlled flow of the COMNICA valve may increase or decrease as shown in the table. Therefore caution should be exercised when COMNICA valves are operated in proximity to solenoid valves.


Example 1: COM-3

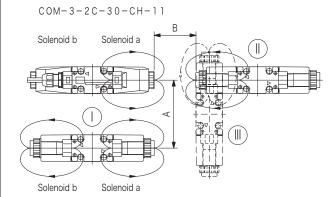

DG4V-3-2C-M-P7-H-7-54

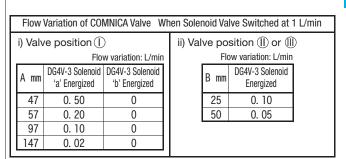

Example 2: COM-5

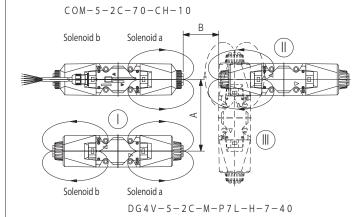


Flow Variation of COMNICA Valve Wh						L/111111
i) Valve position ()		Valve position (I) or (II)				
Flow variation: L/min			Flo	w variation: L/min		
A mm	DG4V-5 Solenoid 'a' Energized	DG4V-5 Solenoid 'b' Energized		B mm	DG4V-5 Solenoid Energized	
70	1. 40	0		25	0. 30	
80	0. 65	0		50	0. 10	
120	0. 30	0				
170	0. 10	0				


Notes regarding the above examples.

- Values may differ according to the orientation of electromagnetic fields and the electrical wiring shown in the illustration.
- Solenoid valves placed in proximity in positions other than those illustrated may also increase/decrease COMNICA valve controlled flows.
- Similar interference may occur with COM-7/8. Consult Tokyo Keiki for


COM-3

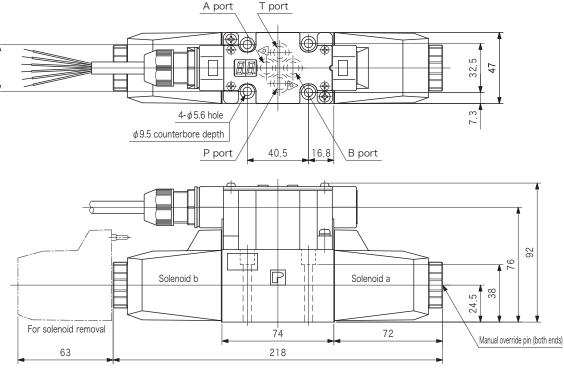


Note: When an adapter plug is provided, refer to page E16-10 for the connection area.

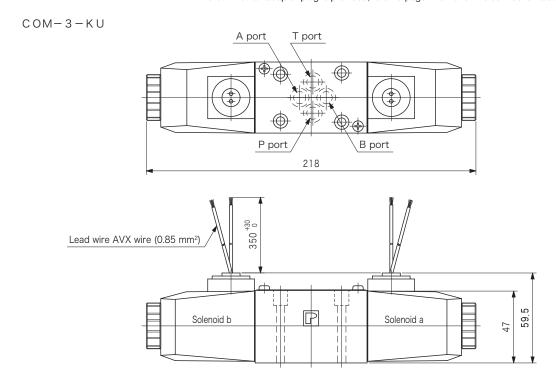




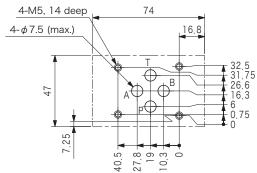


COM-3-U

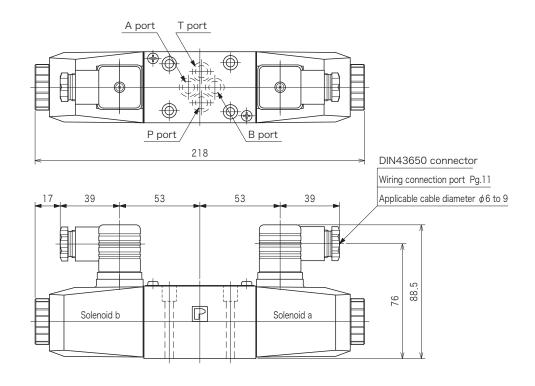

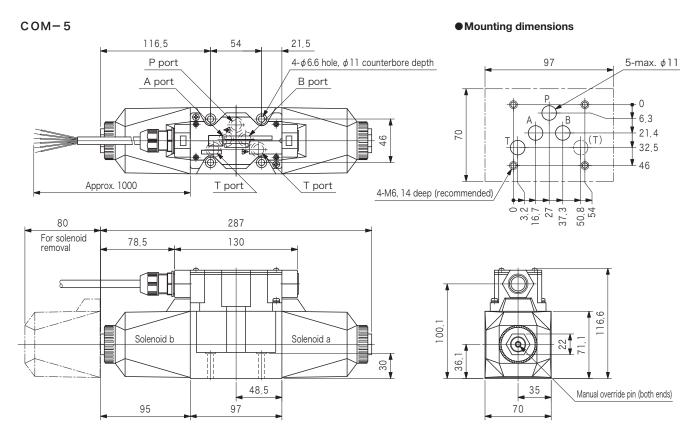


Note: When an adapter plug is provided, refer to page E16-10 for the connection area.

COM-5-KU

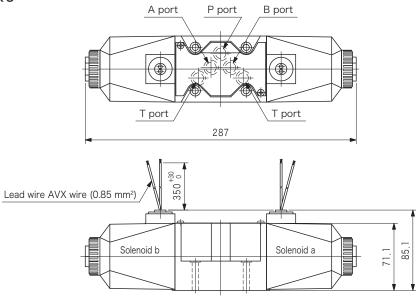




Mounting dimensions

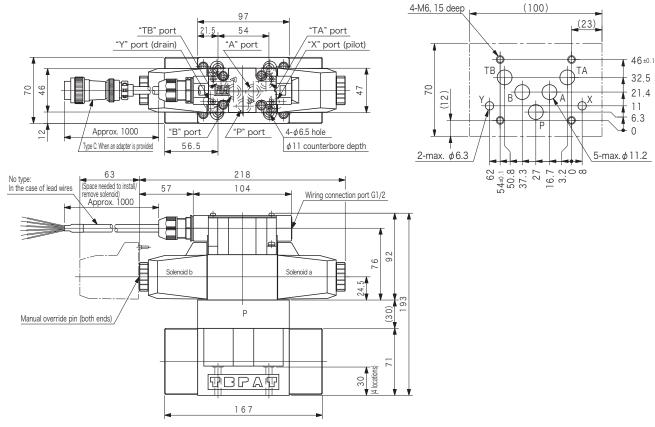


Note:


- When an adapter plug is provided, refer to page E16-10 for the connection area.
 Consult Tokyo Keiki for the outline drawings of the U and KU types.

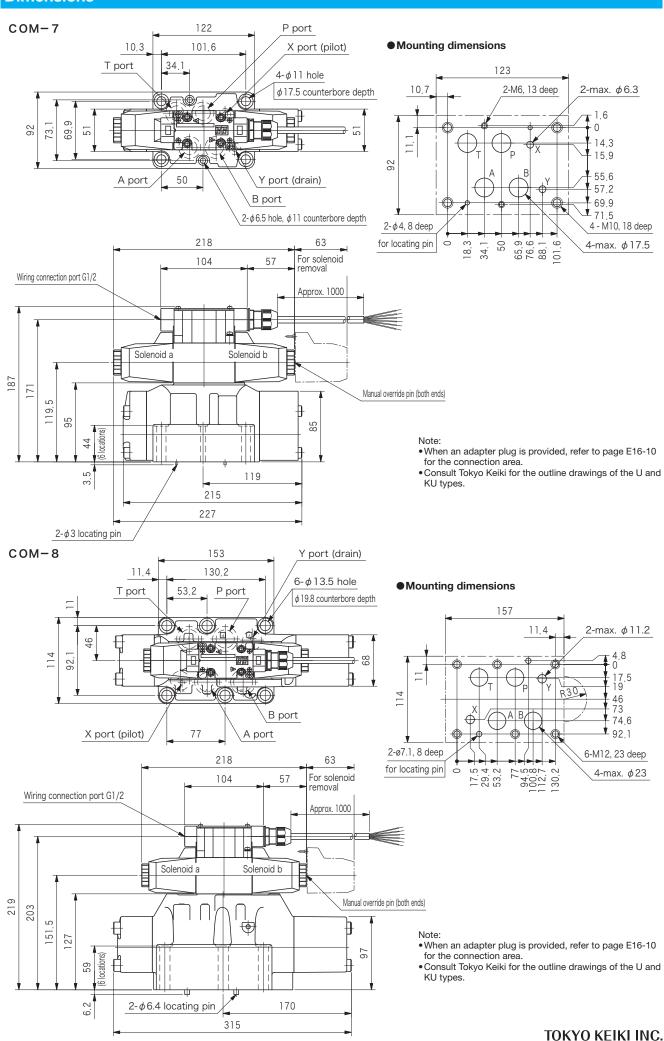

COM-3/52/7/8-C Approx. 1000 SNW-2014-ACM (pin insert) made by Sanwa Denki Kogyo Co., Ltd.

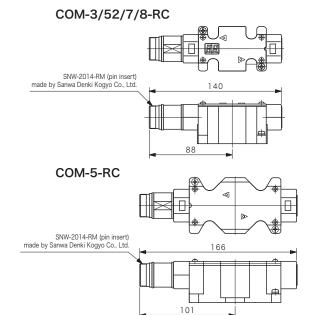


COM-5-C

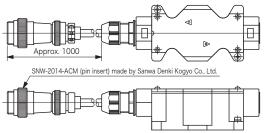

- The inter-fitting position of the -RC type differs depending on the individual valve. Do not use the L-type plug.
- A contact input common pin is provided on the SH type and AN type of the –RC type.

Special Harness

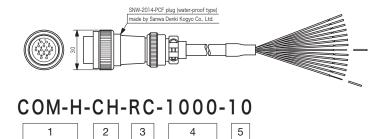

- This harness is connected to the -RC type.
- An input common pin is available and, therefore, both sink wiring and source wiring are supported.

- When used for the –C type, the contact input common pin (orange-black) cannot be used. (+24V common fixed)
 The power 0V and command 0V voltages of the AN type are shorted
- The inter-fitting position of the plug differs depending on the individual valve.

- 1 Harness specially designed for COM series
- 2 CH: For CH type

SH: For SH type

AN: For AN type


- 3 Specially designed with receptacle (RC type)
- 4 Harness length (unit: mm) 1000, 2000, 3000, 4000, 5000
- 5 Design no.

Receptacle Pin No.	Wire Color	СН Туре	SH Type	AN Type
1	Red	Power DC24V	Power DC24V	Power DC24V
2	Black	Power 0V	Power 0V	Power 0V*
3	White - Red ·	1A input	A input	Command input
4	White - Black ·	2A input		
5	Yellow – Red ·	3A input		
6	Yellow - Black ·	1B input	B input	Command 0V*
7	Pink – Red ·	2B input		
8	Pink – Black ·	3B input		
9	Orange – Red ·	Emergency stop input	Stop input	Emergency stop input
10	Orange – Black ·	Contact input common	Contact input common	Contact input common
11	Grey - Red ·	Operation enable output +		
12	Grey - Black ·	Operation enable output –		
13	Orange – Red · ·	Chassis ground	Chassis ground	Chassis ground
14	Grey	Shield	Shield	Shield

^{*} The command 0V and power 0V voltages are shorted inside the valve.

Operation

Two - high/low speed - flow levels, high/low speed arrival times, and low speed flow hold time can be independently set for solenoids "a" and "b." Shockless operation and speed control (flow control) can be easily obtained by selecting the A (solenoid 'a') or B (solenoid 'b') direction with the contact point signals of the PLC. Also positioning control can be obtained by using the stop signal (HALT). (When the energize signal to the solenoid is cut, mode automatically switches to low speed.)

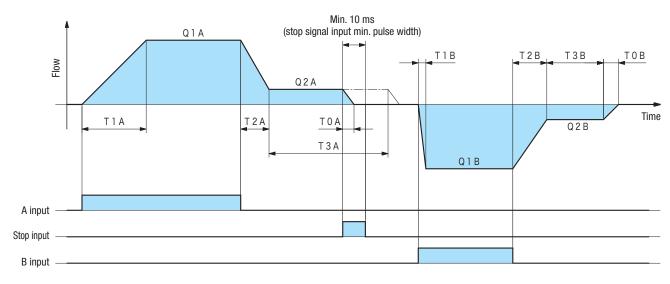


TOA to T3A, T0B to T3B setting range 0 to 9.9 sec.

Q1A to Q2A, Q1B to Q2B setting range 0 to 100%

If stop (HALT) signal is input, COMNICA valve will stop according to deceleration time T0A or T0B setting.


Electrical Wiring Examples

1-meter harness type

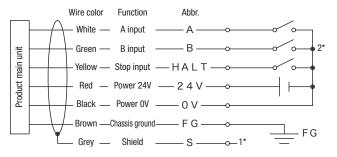


- *1 When using shielded cables, connect shield cable to FG (ground earth) or 0V.
- *2 Only the sink connection is supported.

1-meter harness type with connector

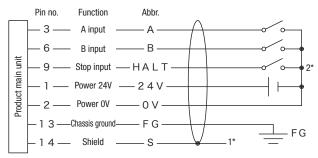

- *1 When using shielded cables, connect shield cable to FG (ground earth) or 0V.
- *2 Only the sink connection is supported.

Receptacle connector type

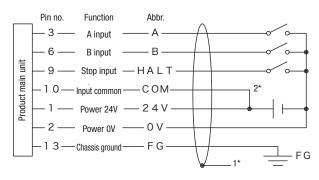


- *1 When using shielded cables, connect shield cable to FG (ground earth) or 0V.
- *2 Both the sink connection and source connection are supported.

3 Channel Setting (CH) Type

Operation


Three flow levels - high speed, medium speed, low speed - and arrival times for solenoids "a" and "b" can be independently set. Valve can be directly connected to PLC, general-purpose relays, proximity switches, etc., to provide simple management of shockless operation, speed control (flow control) and positioning.

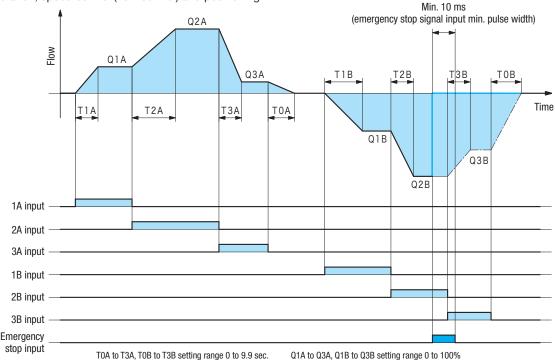

Input of emergency stop signal will immediately generate zero output from amp to valve regardless of whether there are other contact point input signals and valve returns to neutral position and zero flow. Time of valve return to neutral position will be the minimum time of the valve regardless of the T0A and T0B setting times.


Operational output signal will be ON (contact point closed) when controller is operating normally and OFF (contact point open) under abnormal conditions and during data setting. Operational condition can be viewed with the monitor.

Electrical Wiring Examples

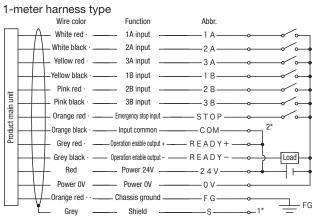


- *1 When using shielded cables, connect shield cable to FG (ground earth) or 0V.
- *2 Both the sink connection and source connection are supported.

1-meter harness type with connector

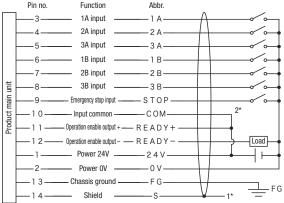

- *1 When using shielded cables, connect shield cable to FG (ground earth) or 0V.
- *2 Both the sink connection and source connection are supported.


Receptacle connector type

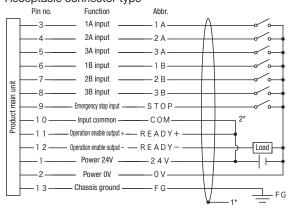

- *1 When using shielded cables, connect shield cable to FG (ground earth) or 0V.
- *2 Both the sink connection and source connection are supported.

Operation

Operation is based on direction of analog voltage polarity with absolute values specified for flow. By setting lag time in advance, ramping can be achieved in response to step input. Lag time is set by arrival time against max. flow. A direction ramp up time (TAU), ramp down time (TAD), B direction ramp up time (TBU) and ramp down time (TBD) can be set separately.

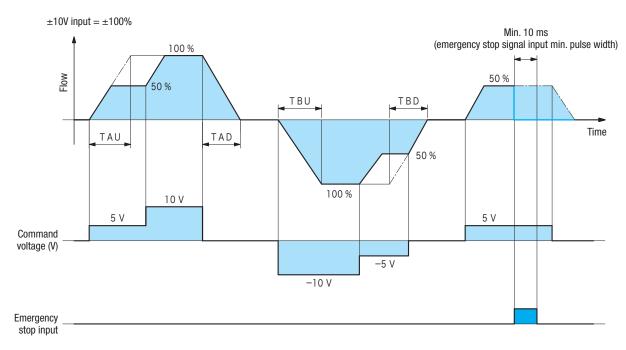


TAU, TAD, TBU, TBD setting range 0 to 9.9 sec.

Flow setting range 0 to 100%

Input of emergency stop signal, will immediately generate zero output from amp to valve regardless of command voltage and valve returns to neutral position with zero flow. Time of valve return to neutral position will be the minimum time of the valve regardless of the TAD and TBD setting times.


Electrical Wiring Examples

1-meter harness type

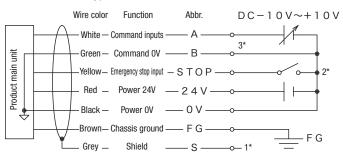


- *1 When using shielded cables, connect shield cable to FG (ground earth) or 0V.
- *2 Only the sink connection is supported.
- *3 The command 0V voltage is connected to the power 0V voltage inside the product main unit.

1-meter harness type with connector

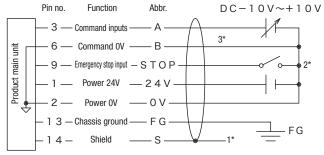


- *1 When using shielded cables, connect shield cable to FG (ground earth) or 0V.
- *2 Only the sink connection is supported.
- *3 The command 0V voltage is connected to the power 0V voltage inside the product main unit.

Receptacle connector type

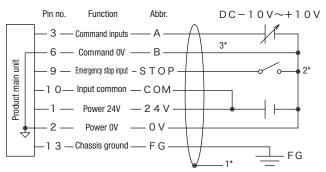

- *1 When using shielded cables, connect shield cable to FG (ground earth) or 0V.
- *2 Both the sink connection and source connection are supported.
- *3 The command 0V voltage is connected to the power 0V voltage inside the product main unit.

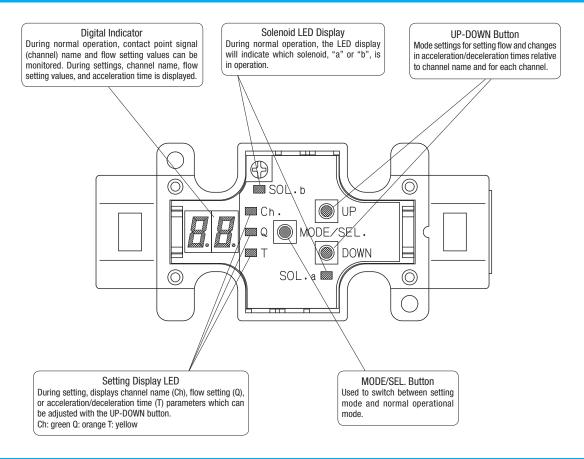


Options

Handheld Setting Device

Model code: COH-1-10 (for all COMNICA valves)

- Handheld setting device allows easy data setting of COMNICA valves in difficult locations.
- · Contact point signal name and flow setting values selected during operation can monitored similar as with the valve display.
- COMNICA valve basic data can be copied to the handheld setting device and copied into other COMNICA valves enabling same settings for multiple valves.

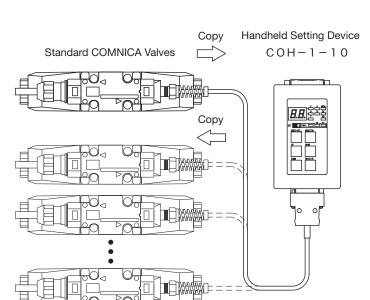



O These separate controllers are used to drive the U and KU types.

The control system, wiring and other characteristics are the same as for the installed controllers.

COM-AMP-3-CH-H-11

1 2 3 4 5

1 COMNICA valve separate controller

2 Compatible valves

3: For COM-3

5: For COM-5

52: For COM-52

7: For COM-7

8: For COM-8

3 Control

SH: Shockless

CH: 3 Channel setting

AN: Analog input


4 Supply voltage


H: DC24V


G: DC12V

5 Design no.


Model Code	COM-AMP-*-**-G-11		
Applicable solenoid coil	For DC12V	For DC24V	
Power supply	Voltage DC10.8 to 14V Voltage DC21.6 to 28V Current 1.8A or higher Current 1.8A or higher		
Max. power consumption	22W	40W	
Ambient temperature	0~60°C		
Relative humidity	40~70%		
Storage temperature	-10~	-60°C	
Vibration resistance	45m/s² (Jl	S D 1601)	
Shock resistance	150m/s² (J	IIS C 0041)	
Waterproof, dustproof	IP	20	
Communication	Conforming	j to RS-422	
Wiring specifications	1-meter harr	ess provided	
1/0	Electrical Wir	ing Examples	

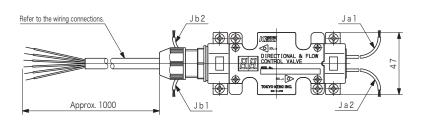

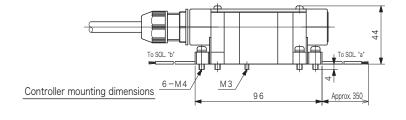

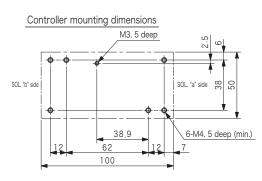

Method of connecting the wires between the controller and valve body

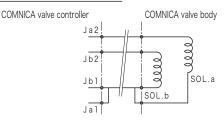

Mounting Bolts (JIS B 1176, Strength Class 12.9)

Valve Model	Hex Socket Bolts	Qty
COM-3	M5 × 50	4
COM-5, COM-52	M6×40	4
COM-7	M10×60	4
COIVI-1	M6×55	2
COM-8	M12×80	6

- Mounting bolts must be ordered separately.
- Tightening torque of mounting bolts

M5: 7 to 8 N·m M6: 9 to 14 N·m M10: 50 to 60 N·m M12: 75 to 81 N·m

Subplate

COM-3/5

Valve Model	Subplate	Connection Port Dia. Rc	Porting
COM-3	DGMS-3-1E-10-T-JA-J	3/8	Side
GOIVI-3	DGVM-3-10-T-JA-J	3/0	Rear
COM-5	DGSM-01X-10-JA-M	3/8	Rear
COIVI-3	DGSM-01Y-10-JA-M	1/2	neai

COM-7/8

	Valve	Subplate	Connection I	Port Dia. Rc
	Model	Subplate	P, T, A, B	X, Y
·	COM-7	DGSMV-04-10	1/2	1/4
COW-1	DGSMV-04X-10	3/4	1/4	
	COM-8	DGSMV-06-10	3/4	1/4
	COM-0	DGSMV-06X-10	1	1/4

- A subplate is not available for the COM-52 model.
- Subplate must be ordered separately.
- See page R6-5 to R6-7 for dimensions.
- COM-3/5 mounting bolts must be ordered separately. COM-7/8 subplates are supplied with hex socket bolts for mounting valve.
- Max. working pressure is 21 MPa. For higher pressures, valve should be mounted on manifold block.


Construction


O-ring COM-3


No.	Part No.	Standard	Qty
2	008001917	JIS B 2401 1A-P21	2
4	008000217	JIS B 2401 1A-P4	4
7	007911429	AS568-114 (FKM, Hs90)	2
11	007901219	AS568-012 (NBR, Hs90)	4
14	007900817	AS568-008 (NBR, Hs70)	1

O-ring COM-5


No.	Part No.	Standard	Qty
2	007912117	AS568-121 (NBR, Hs70)	2
4	008000217	JIS B 2401 1A-P4	4
5	007902617	AS568-026 (NBR, Hs70)	2
7	007911729	AS568-117 (FKM, Hs90)	2
11	007901419	AS568-014 (NBR, Hs90)	5
14	007900817	AS568-008 (NBR, Hs70)	3

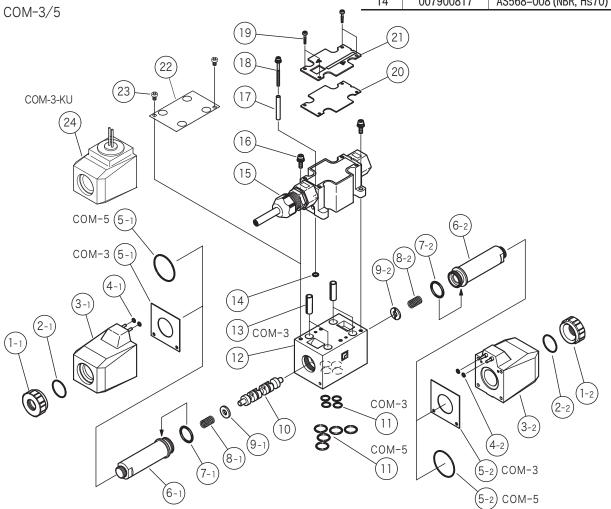

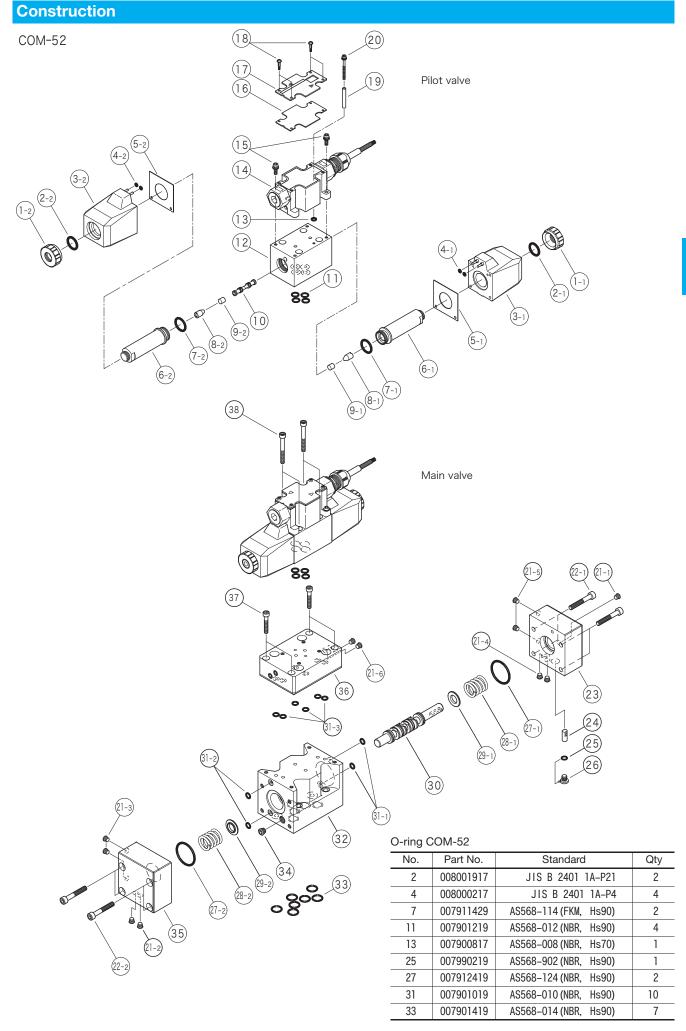

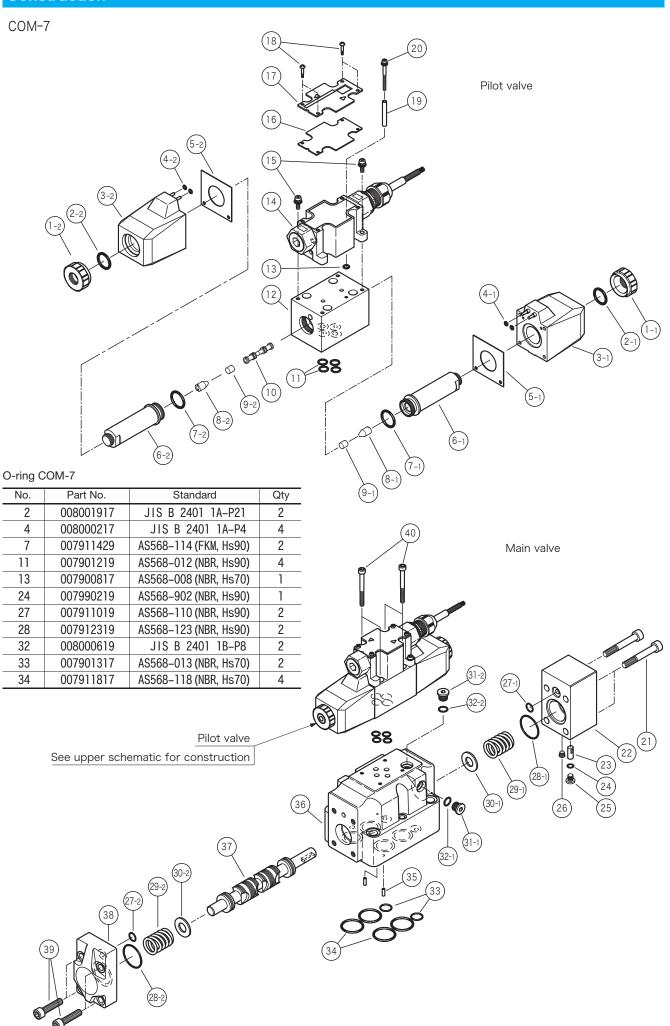

TOKYO KEIKI INC.

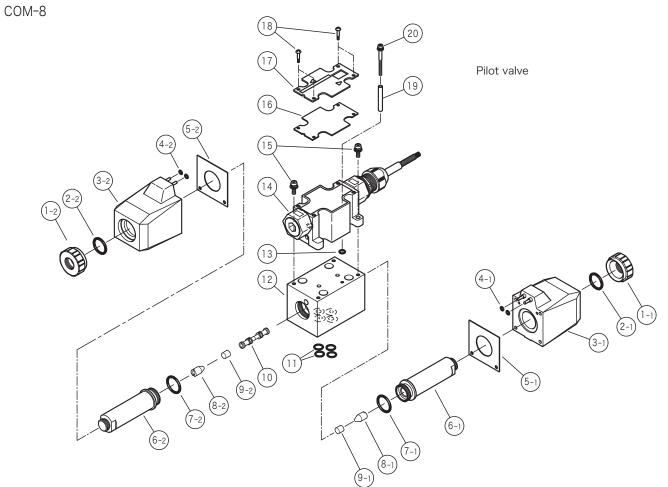

O-ring COM-8

No. P					
NO.	art No.	Standard	Qty		
2 008	3001917	JIS B 2401 1A-P21	2		
4 008	3000217	JIS B 2401 1A-P4	4	(40)	
7 00	7911429	AS568-114 (FKM, Hs90)	2	(40)	
11 00	7901219	AS568-012 (NBR, Hs90)	4		Main valve
13 00	7900817	AS568-008 (NBR, Hs70)	1	Ĭ	Iviairi vaive
24 00	7990219	AS568-902 (NBR, Hs90)	1		
28 00	7922417	AS568-224 (NBR, Hs70)	2		
33 00	7921017	AS568-210 (NBR, Hs70)	2		
34 00	7921517	AS568-215 (NBR, Hs70)	4		0
	38 (28-2)	(37) (30-2) (30-2) (30-2)		8 g 35	(30-1)